



STEPPER DRIVE : DM2282

DM 2282 - Phase Digital Stepper Drive

- Input supply- 80-220VAC, 0.5-8.2A peak, Auto-configuration, Low Noise
- Anti- Resonance provides optimal torque and nulls mid-range instability.
- Motor auto-identification and parameter auto-configuration technology, offers optimal responses with different motor.
- Multi-Stepping allows a low resolution step input to produce a higher micro step output, this offers smoother motor movement.
- Micro step resolutions programmable, from full-step to 102,400. It can also be set via DIP switches.
- Soft-Start with no “jump” when powered on.
- Supply voltage up to +220 Khz.
- Output current programmable, from 0.5A to 8.2A. It can also be set via DIP switches.
- Pulse input frequency up to 200 Khz.
- TTL compatible and optically isolated input.
- Automatic idle-current reduction (Reduction rate can be software configured).
- Suitable for 2-phase and 4-phase motors.
- Support PUL/DIR and CW/CCW modes.
- Over-voltage, Under-voltage, Over-current, phase-error protections.



Descriptions

The DM2282 is a high voltage, fully digital stepper drive developed with advanced DSP control algorithm based on the latest motion control technology. It has achieved a unique level of system smoothness, providing optimal torque and nulls mid-range instability. Its motor auto-identification and parameter auto-configuration feature offers quick setup to optimal modes with different motors. Compared with traditional analog drives, DM2282 can drive a stepper motor at much lower noise, lower heating, and smoother movement. Its unique features make DM2282 an ideal choice for high requirement applications.

Applications

Suitable for a wide range of stepper motors, from NEMA size 34 to 51. It can be used in various applications such as laser cutters, laser markers, high precision X-Y tables, labeling machines, CNC router, etc. Its unique features make the DM2282 an ideal choice for applications that require both low-speed smoothness and high speed performances.



STEPPER DRIVE : DM2282

Specifications:


Electrical Specifications:

Parameter	Min	Typical	Max	Unit
Input Voltage	80	220	220	VAC
Pulse Input Frequency	0	-	200	kHz
Logic Signal Current	7	10	16	mA
Isolation Resistance	500	-	-	MΩ

Operating Environment:

Cooling	Natural cooling or Forced cooling	
Operating Environment	Environment	Avoid dust, oil fog and corrosive gases
	Storage Temperature	-20°C – 65°C (-4°F – 149°F)
	Ambient Temperature	0°C – 50°C (32°F – 122°F)
	Humidity	40%RH – 90%RH
	Operating Temperature (Heat Sink)	70°C (158°F) Max
Storage Temperature	-20°C – 65°C (-4°F – 149°F)	
Weight	1.3 Kg (2.87lbs)	

Mechanical Specifications:

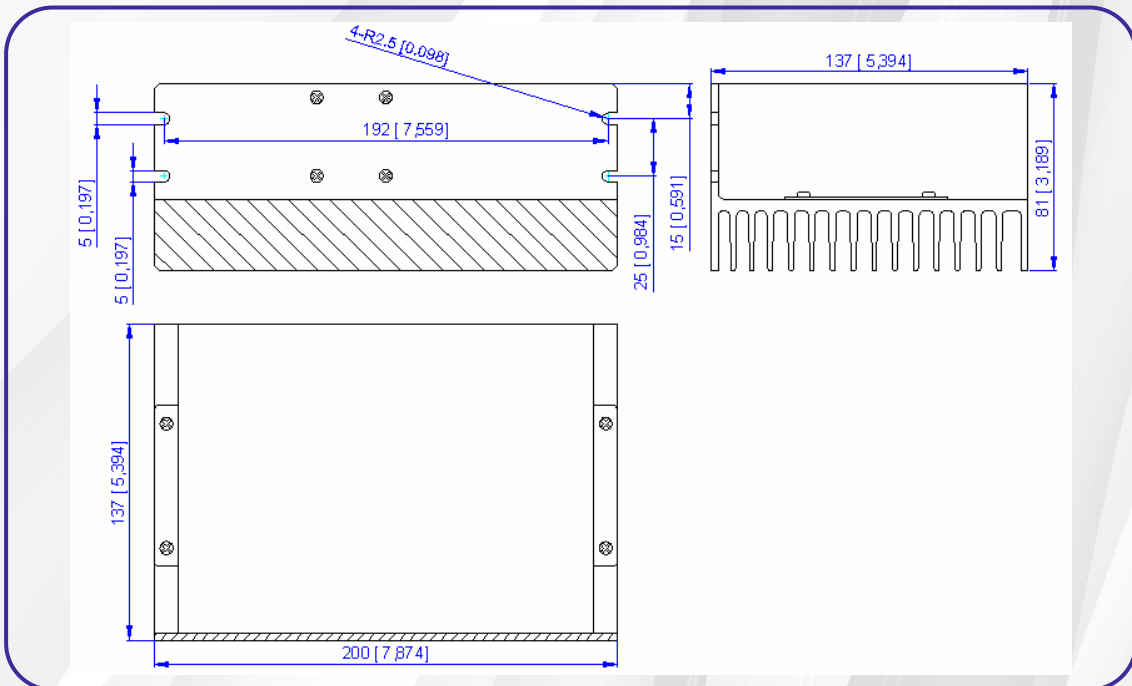



STEPPER DRIVE : DM2282

Protection Indications :

The green indicator turns on when power-up. When drive protection is activated, the red LED blinks periodically to indicate the error type.

Priority	Time(s) of Blinks	Sequence wave of RED LED	Description
1st	1		Over-current Protection
2nd	2		Over-voltage Protection
3rd	3		Low-voltage Protection
4th	4		Phase Error Protection
5th	5		Over Temperature Protection

Pin Assignment :

The DM2282 has one barrier strip connector for power and motor connections and one screw terminal for control signal connections.

Power and Motor Connector			
Pin	Name	I/O	Description
1	PE	-	Recommend connect this port to the ground for better safety.
2	L	I	Power supply inputs. If AC input, recommend use isolation transformers with theoretical output voltage of 80-220 VAC. DC input range is 115-305 VDC
3	N	I	
4	A+	O	Motor Phase A+
5	A-	O	Motor Phase A-
6	B+	O	Motor Phase B+
7	B-	O	Motor Phase B-



STEPPER DRIVE : DM2282

Pin Assignment :

Control Signal Connector			
Pin	Name	I/O	Description
1	PUL+	I	Pulse Signal: In single pulse (pulse/direction) mode, this input represents pulse signal, each rising or falling edge active (software configurable, see DM derives software operational manual for the detail); In double pulse mode (software configurable), this input represents clockwise (CW) pulse, active both at high level and low level. 4-5V when PUL-HIGH, 0-0.5V when PUL-LOW. For reliable response, pulse width should be longer than 2.5µs. Series connect resistors for current-limiting when +12V or +24V used. The same as DIR and ENA signal.
2	PUL-	I	
3	DIR+	I	Direction Signal: In single-pulse mode, this signal has low/high voltage levels, representing two directions of motor rotation. In doouble-pulse mode (software configurable), this signal is counter-clock (CCW) pulse, active both at high level or low level. For reliable motion response, DIR signal should be aead of PUL signal by 5µs at ;least. 4-5V when DIR--HIGH, 0-0.5V when DIR-LOW. Please note that roation direction is also related to motor-driver wiring match. Exchanging the connection of two wires for a coil to the driver will reverse motion direction. The direction signal's polarity is software configurable.
4	DIR-	I	
5	ENA+	I	Enable Signal: This signal is used for enabling/disabling the drive. In default, high level (NPN control signal) for enabling the driver and low level for disabling the driver. Usually lift (UNCONNECTED *ENABLED). Please note that PNP and Differential control signals are on the contrary, namely low level for enabling. The active level of ENA signal is software configurable.
6	ENA-	I	
7	FAULT+	O	Fault Signal: OC output signal, active when one of the following protection is activated: over-voltage, over current, low voltage, phase error and over-temperature. This port can sink or source 20mA current and 24V. In default, the resistance between FAULT+ and FAULT- is high impedance in normal operation and become low when DM2282 goes into error.
8	FAULT-	O	

RS232 Communication Port :

The RS232 communication port is used to configure the DM2282's peak current, microstep, active level, current loop parameters and anti-resonance parameters. See DM driver's software operational manual for more information.

RS232 Communication port			
Pin	Name	I/O	Description
1	NC	-	Not connected.
2	+5V	O	+5V power only for STU (simple Tuning Unit)
3	TxD	O	RS232 transmit.
4	GND	GND	Ground
5	RxD	I	RS232 receive.
6	NC	-	Not connected.



STEPPER DRIVE : DM2282

DIP Switch Settings :

Dynamic Current

Peak	RMS	SW 1	SW 2	SW 3
Default	Default	OFF	OFF	OFF
2.2A	1.6A	ON	OFF	OFF
3.2A	2.3A	OFF	ON	OFF
4.2A	3.2A	ON	ON	OFF
5.2A	3.7A	OFF	OFF	ON
6.3A	4.4A	ON	OFF	ON
7.2A	5.2A	OFF	ON	ON
8.2A	5.9A	ON	ON	ON

RS232 Communication Port :

The RS232 communication port is used to configure the DM2282's peak current, microstep, active level, current loop parameters and anti-resonance parameters. See DM driver's software operational manual for more information.

RS232 Communication port			
Pin	Name	I/O	Description
1	NC	-	Not connected.
2	+5V	O	+5V power only for STU (simple Tuning Unit)
3	TxD	O	RS232 transmit.
4	GND	GND	Ground
5	RxD	I	RS232 receive.
6	NC	-	Not connected.